



USP Spare Part List					
Pos.	Part No.	Description	Pos.	Part No.	Description
1/1	604-001-010	Bottle	27	601-004-030	Coiled Hose
2	604-002-000	Piston Rod	28	601-004-040	Hose Holder Spring
3	604-003-000	Spring	29/1	604-029-010	Female Adapter
4	604-004-000	Countersunk Screw	DFV	500-009-000	DF Valve Assembly
5	604-005-000	Cylinder Cap	DF9.1	505-009-010	Gasket
6	505-001-020	Spring	DF9.2	500-009-020	Housing Strainer
7	604-007-000	Piston	DF9.3	500-009-030	Gasket
8	604-008-000	O-Ring	DF9.4	500-009-040	Strainer
9	604-009-000	Pump Cylinder Assembly	DF9.5	500-009-050	Valve Body
10	935-027-010	O-Ring	DF9.6	500-009-060	Trigger
11	604-011-000	Cylinder Tube	DF9.7	500-009-070	Trigger Screw
12	604-012-000	Check Valve	DF9.8	500-009-080	Safety Lock Nut
13	604-013-000	Pressure Gauge	DF9.9	500-009-090	Snap Ring
14	510-003-030	T-Connector	DF9.10	500-009-100	Adjusting Screw
15/1	604-015-010	Bottle Cap	DF9.11	500-009-110	Lock Nut
16/1	604-016-010	O-Ring	DF9.12/1	500-009-121	Sealing Nut
17	604-017-000	Hook Ring	DF9.13/1	500-009-131	O-Ring x2
18	601-018-000	Hook Ring	DF9.15	500-009-150	Seat Spring
19	604-019-000	Pressure Release Valve	DF9.18	500-009-180	O-Ring, Viton
20	604-020-000	Supply Tube Assembly consisting 21,22	DF9.19	505-009-150	Gasket
21	604-021-000	Tube Adapter	DF9.20	500-009-200	Long Seat Stem
22	604-022-000	Supply Tube	DF12	500-012-000	Multi-Nozzle Assembly
23	604-023-000	Disc	DF9.19	505-009-150	Gasket
24	505-002-020	Gasket	DF12.3	500-012-030	Multi-Nozzle Holder
	604-035-000	Pump Service Kit, 8,10,12 16/1,20,24x3	DF12.4	500-012-040	Gasket
			DF12.6	500-012-060	Multi-Nozzle
			DF12.7	500-012-070	Retainer
25	604-025-000	Hose Replacement Kit consisting 26/2x2,26/3x2,27	DF12.8	935-018-000	O-Ring
26	601-004-010	Hose Adapter Assembly	DF12.9	505-012-090	Crack & Crevice Straw
26/1	601-004-011	Adapter	DF12.10	505-012-100	Straw with O-Ring
26/2	601-004-012	Cutting Ring		604-036-000	DF Service Kit, 24,DF-9.3 9.13/1,9.18,9.19x2,12.4,12.8
26/3	601-004-013	Retaining Nut			