
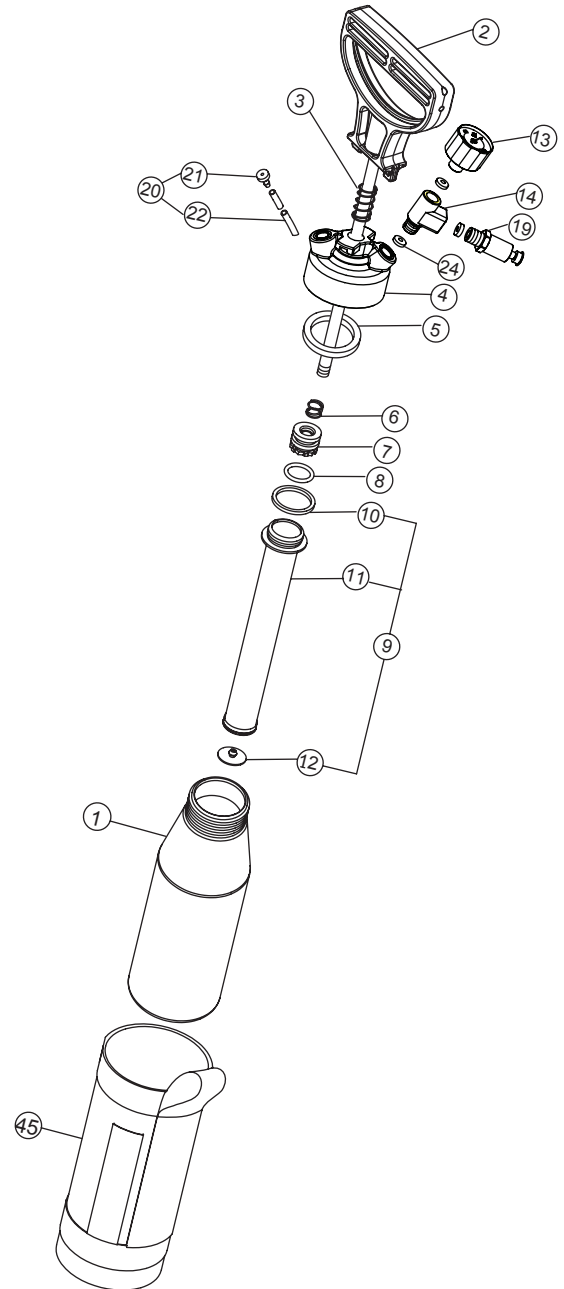


Mini Sprayer Pistol Grip Assembly

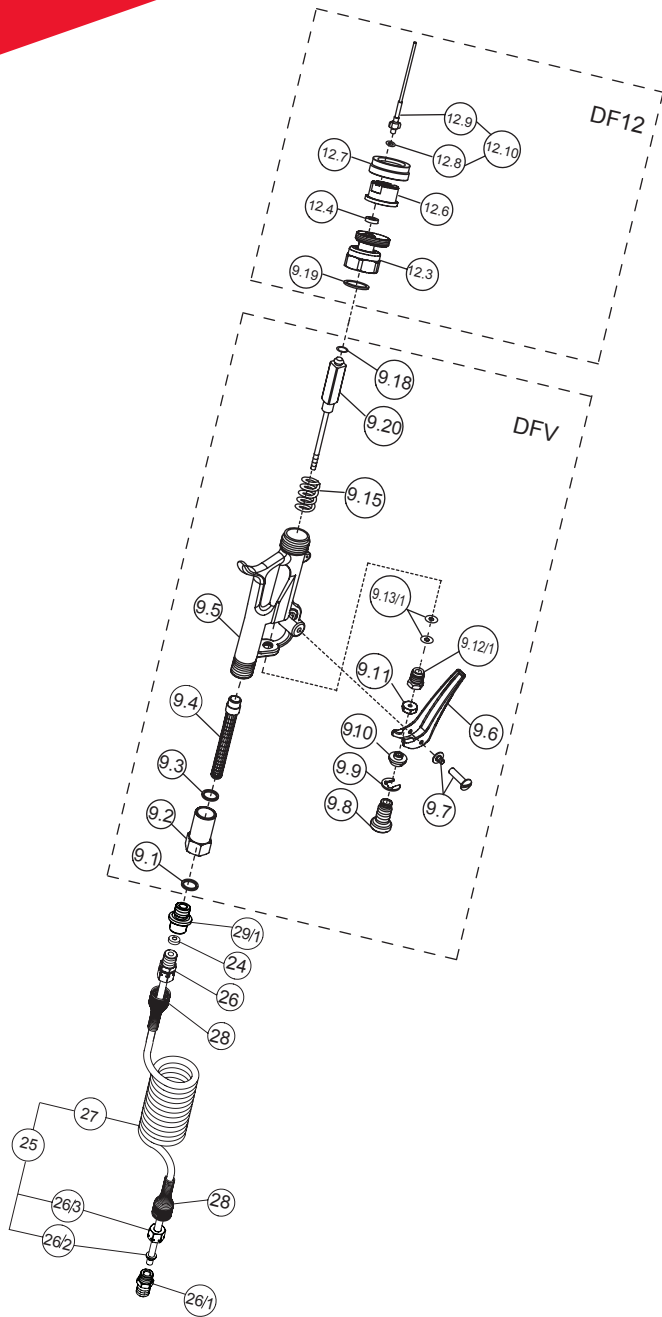

Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com

Mini Sprayer Pistol Grip Parts List

Pos.	Part no.	Description
1	603-001-000	Bottle
2	605-002-000	Piston rod
3	604-003-000	Spring
4	605-004-000	Bottle cap
5	605-005-000	Viton gasket
6	505-001-020	Spring
7	605-007-000	Piston
8	605-008-000	O-ring
9	605-009-000	Pump cylinder assembly
10	605-010-000	Gasket
11	605-011-000	Cylinder tube
12	604-012-000	Check valve
13	604-013-000	Pressure gauge
14	510-003-030	T-connector
19	604-019-000	Pressure release valve
20	603-020-000	Supply tube assembly
21	604-021-000	Tube adapter
22	603-022-000	Supply tube
24	505-002-020	Gasket
26	601-004-010	Hose adapter assembly
26/1	601-004-011	Adapter
26/2	601-004-012	Cutting ring
26/3	601-004-013	Retaining nut
27	601-004-130	Coiled hose; Blue
28	601-004-040	Hose protective spring

Pos.	Part no.	Description
29	604-029-010	Female adapter
DFV	500-009-000	DF valve assembly
9.2/1	501-009-020	Housing strainer
9.3	500-009-030	Gasket
9.4	500-009-040	Strainer
9.5	500-009-050	Valve body
9.6	500-009-060	Trigger
9.7	500-009-070	Trigger screw
9.8	500-009-080	Safety lock nut
9.9	500-009-090	Snap ring
9.10	500-009-100	Adjusting screw
9.11	500-009-110	Lock nut
9.12/1	500-009-121	Sealing nut
9.13/1	500-009-131	Viton o-ring
9.15	500-009-150	Seat spring
9.18	500-009-180	Viton o-ring
9.20	500-009-200	Long seat stem
12	500-012-000	Multi-nozzle assembly
9.19	505-009-150	Gasket
12.3	500-012-030	Multi-nozzle holder
12.4	500-012-040	Gasket
12.6	500-012-060	Multi-nozzle
12.7	500-012-070	Retainer
12.8	935-018-000	Viton o-ring
12.9	505-012-090	C&C Straw
12.10	505-012-100	Straw with o-ring
45	605-020-010	Airofog carrying pouch

Service Kits

MSP Service Kit 605-000-001



Airofog USA
15074 Aviation Loop Drive
Brooksville, FL 34604
USA

+1-352-593-5152
airofog@airofogusa.com
www.airofogusa.com