


# Ductable Inlet Mounting Detail




4201 Lien Road, Madison, WI 53708

1-800-533-7533

[www.thermastor.com](http://www.thermastor.com)

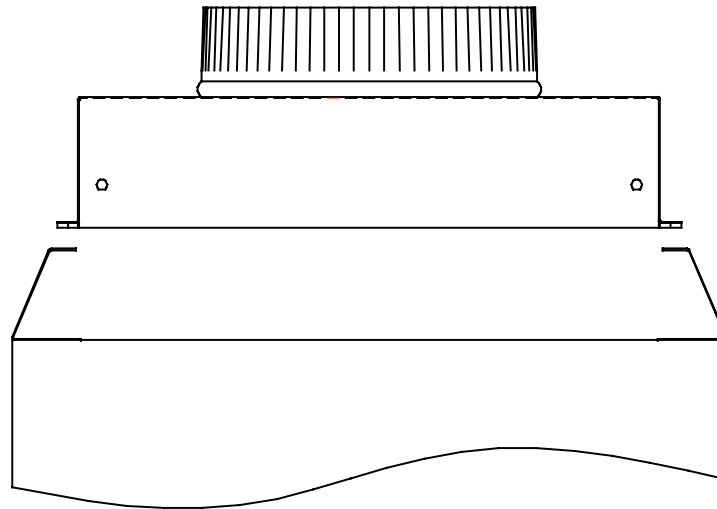

DUCTABLE  
INLET

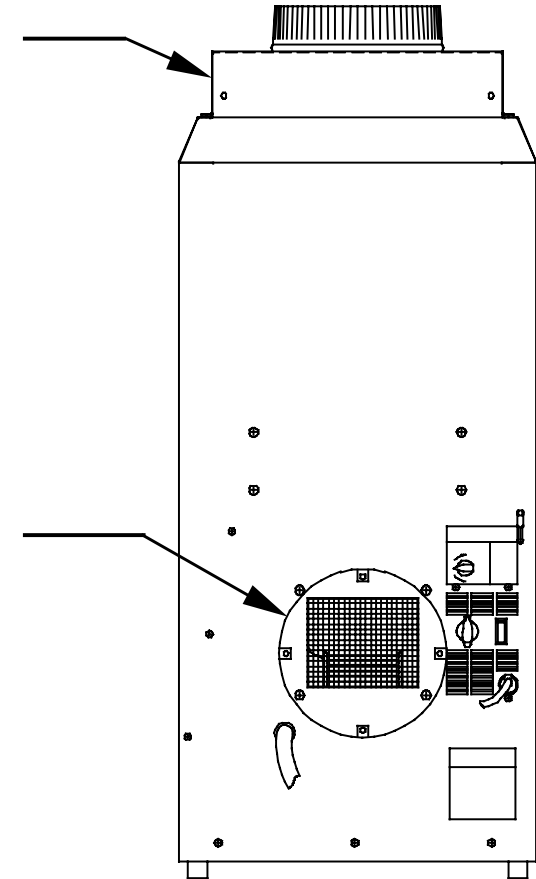

## Ductable Inlet Instructions

1. Remove the Filters from the unit.
2. Remove the ductable inlet from the box and remove the release paper from the tape on the inlet flanges.
3. Center the inlet above the filter guides and attach the inlet to the guides.
4. Replace the filters in the unit.
5. The six inch opening may be used as a fresh air inlet from outside.

## Exhaust Collar Mounting Instructions

6. Remove the exhaust collar from the box and bend the tabs in.
7. Place the collar over the blower outlet and line up the tabs with the holes in the cabinet.
8. Using (4) screws from the kit, attach the collar to the unit.