


USA

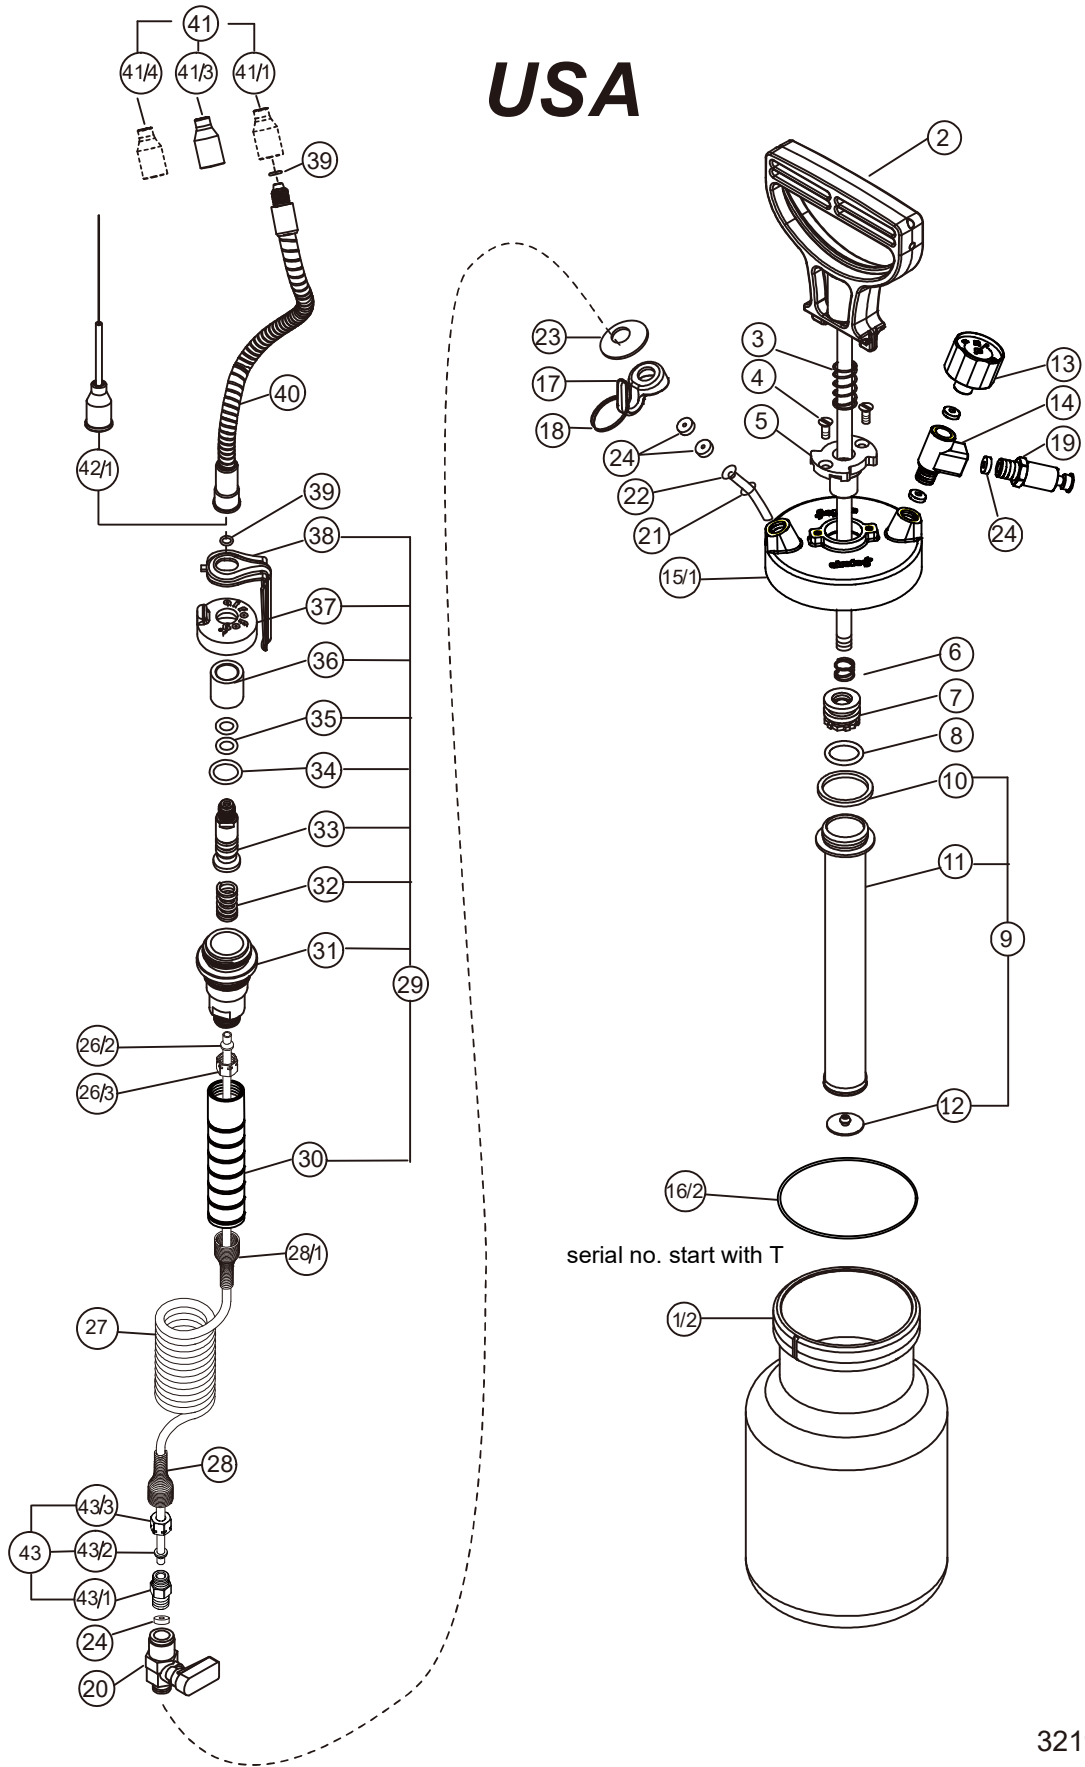

321918

USA Spare Part List

Pos.	Part No.	Description	Pos.	Part No.	Description
1/2	604-001-110	Bottle	28/1	603-004-040	Hose Holder Spring
2	604-002-010	Piston Rod, Black	29	601-007-000	Flexi-Valve, Assembly consisting 30-38
3	604-003-000	Spring			
4	604-004-000	Countersunk Screw	30	601-007-010	Valve Handle
5	604-005-010	Cylinder Cap, Black	31	601-007-020	Valve Body
6	505-001-020	Spring	32	505-003-014	Spring
7	604-007-000	Piston	33	601-007-040	Seat
8	604-008-000	O-Ring	34	601-007-060	O-Ring, Viton
9	604-009-000	Pump Cylinder, Assembly	35	935-041-000	O-Ring, Viton
10	935-027-010	O-Ring	36	601-007-070	Seat Sleeve
11	604-011-000	Cylinder Tube	37	601-007-080	Valve Cup
12	604-012-000	Check Valve	38	601-007-090	Trigger
13	604-013-000	Pressure Gauge	39	601-007-100	O-Ring, Viton
14	510-003-030	T-Connector	40	601-008-010	Extension , Spiral Wand
15/1	604-015-010	Bottle Cap	41	601-009-000	Aerosol Nozzle Set consisting 41/1,41/3,41/4
16/2	604-016-110	O-Ring			
17	604-017-010	Hook, Black	41/1	601-009-030	Aerosol Nozzle, White (optional)
18	601-018-000	Hook Ring	41/3	601-009-050	Aerosol Nozzle, Blue
19	604-019-000	Pressure Release, Valve	41/4	601-009-070	Aerosol Nozzle, Red (optional)
20	601-003-000	Ball Valve	42/1	604-010-012	Extension, Crack-Crevice, 12cm
21	604-019-006	O-Ring	43	601-004-100	Swivel Hose Adapter, Assembly
22	604-022-010	Supply Tube S.S.	43/1	601-004-105	Swivel Hose Adapter
23	604-023-000	Disc	43/2	601-004-103	Cutting Ring
24	505-002-020	Gasket	43/3	601-004-104	Retaining Nut
26/2	601-004-012	Cutting Ring	USA	601-023-200	Flexi-Valve Service Kit (34,35x2,39x3)
26/3	601-004-013	Retaining Nut			
27	601-004-130	Coiled Hose, Blue		604-035-020	Pump Service Kit, incl. 8, 10, 12, 16/2, 21, 24*5
28	601-004-040	Hose Holder Spring			