



771-000-110



5 TIPS, 1 & 2 GPM PLUS VOID TIP
7/16 RODS, QUICK CONNECT

***Sub-slab injector
Termi-tool Manual***

Sub-slab Injector TERMI-Tool

READY TO USE

TERMI-Tool is a professional and efficient equipment for a maximum distribution of the termiticides into the soil, and under through slabs, blocks and concrete. It has a variety of tips for application in different construction situations. It can be applied together with any tank or compressor.

SAFETY INSTRUCTIONS

- Check condition and proper function of TERMI-Tool before use.
- Wear personal protective equipments while handling.
- Before connecting the tool to the supply hose, check the trigger is in off position.
- Before removing the tool, shut off the pump and relieve the pressure in the hose.
- Do not leave the tool unattended when the valve is in the on position.
- Follow label instructions of termiticides.

CARE AND MAINTENANCE


- Flush the tips, rods and the valve with clean water regularly.
- Replace the tips when they are abraded.
- Inspect all gaskets, washer and o-rings periodically for wear and tear , replace when necessary.



FEATURES:

- Economical and durable
- Variable configurations for great flexibility
- Dual coupling size for different external attachments (e.g. flowmeter)
- Multiple variety of stainless steel tips for wide range of application
- Dual-length stainless steel pipe-set with foot ram assembly
- Most effective and versatile with current termiticides



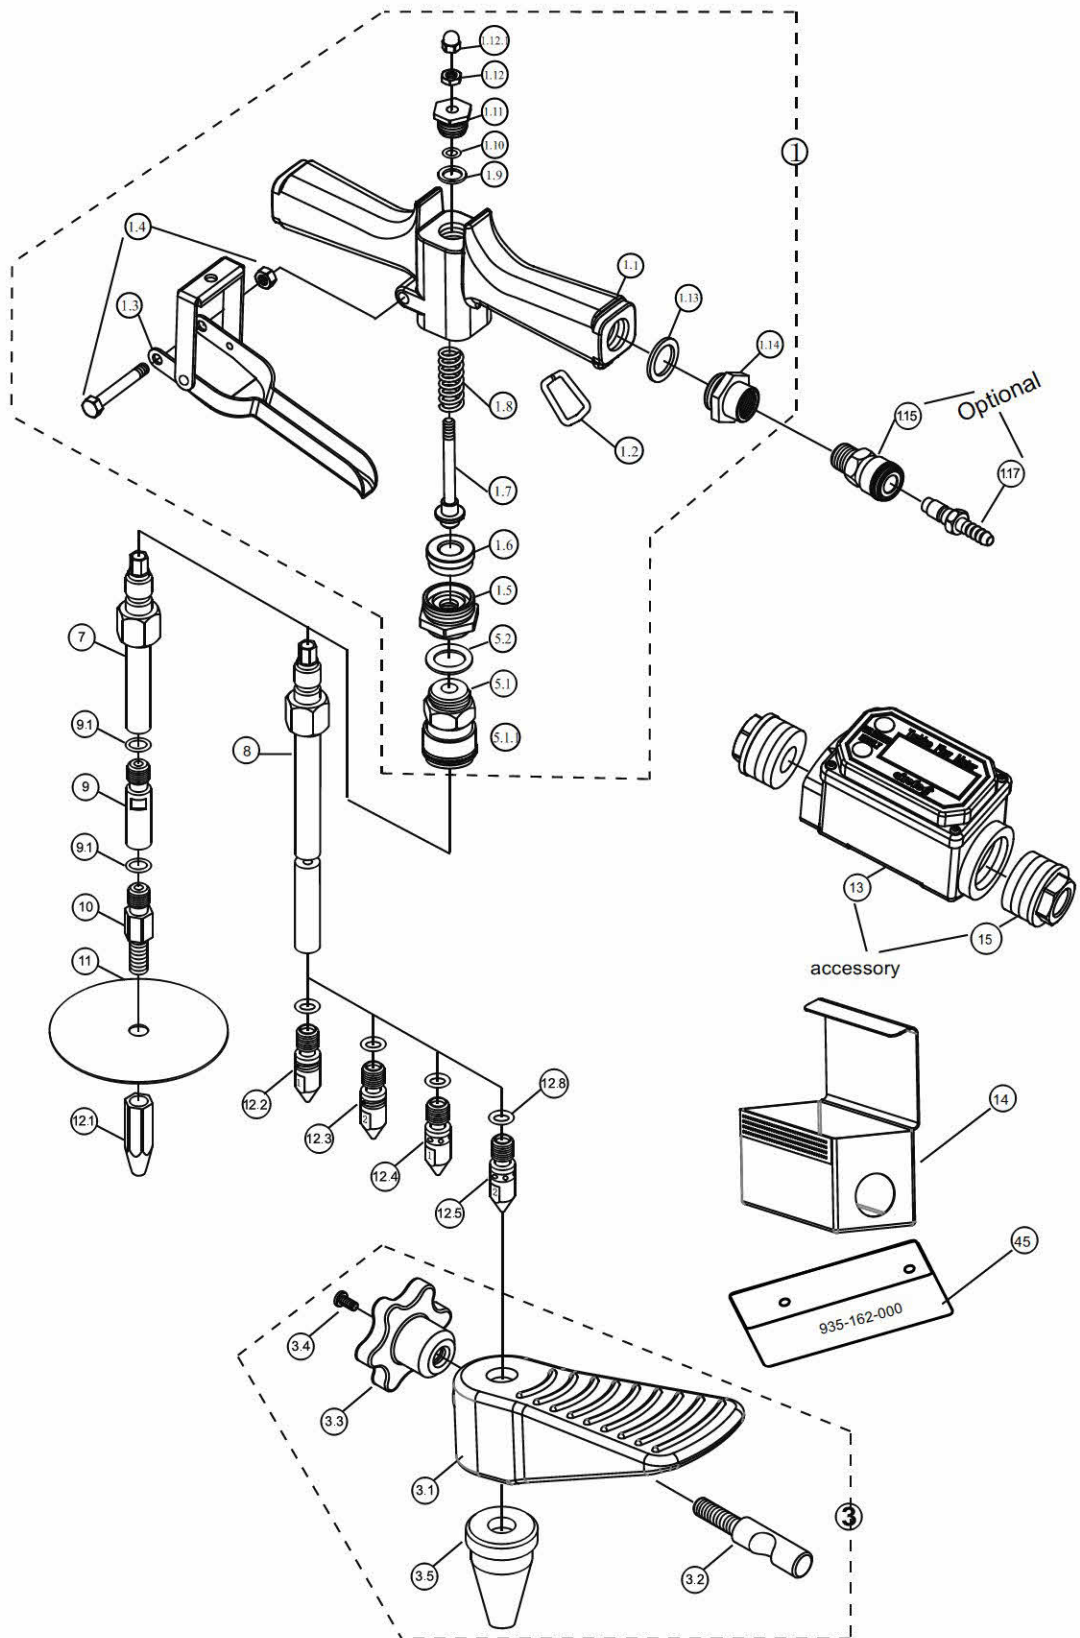

TERMI-Tool Spare Part List		
Pos. no.	Part no.	Description
1	771-001-000	Valve Assembly
1.1	771-001-010	Valve body
1.2	771-001-020	Ring
1.3	771-001-030	Trigger
1.4	771-001-040	Pin
1.5	771-001-050	Adapter
1.6	771-001-060	Packing
1.7	771-001-070	Stem, Shutoff
1.8	771-001-080	Spring Shutoff
1.9	771-001-090	Gland
1.1	771-001-100	O-ring
1.11	771-001-110	Screw
1.12	771-001-120	Nut
1.12.1	771-001-121	Cap Nut
1.13	771-001-130	Seal
1.14	771-001-140	Adapter
5.1	770-005-010	Socket, Quick Connect
5.1.1	770-005-011	O-Ring, Quick Connect
5.2	771-005-020	Gasket
3	770-003-000	Cone Seal Assembly
3	770-003-010	Foot Ram Weldment
3.2	770-003-020	Bolt
3.3	770-003-030	Knob
3.4	770-003-040	Screw
3.5	770-003-050	Seal, Cone
7	770-007-000	Extension rod, 12"
8	770-008-000	Extension rod, 40"
9	770-009-000	Check Valve
9.1	770-009-010	O-Ring
10	770-010-000	Adapter
11	770-011-000	Guard, Anti-Splash
12.1	770-012-010	Tip, Void
12.2	770-012-020	Tip, 180 1gpm Fan
12.3	770-012-030	Tip, 180 2gpm Fan
12.4	770-012-040	Tip, Slab 360 1gpm 6 hole
12.5	770-012-050	Tip, Slab 360 2gpm 6 hole
12.8	770-012-080	O-Ring
Optional		
1.15	770-001-150	Socket, Quick Connect
1.17	770-001-170	Plug, Quick Connect Hose
13	771-013-000	Flow Meter
14	771-014-000	Flow Meter Pouch
15	771-015-000	Adapter NPT 1"
45	935-162-000	Tool bag
	771-006-010	Valve Service Kit (1.6, 1.9, 1.10, 5.1.1, 5.2)
	771-006-020	Tip Service Kit (9.1x2, 12.8x4, 3.5)