

Return Duct Kit

Part No. 4035646


Parts Included:



Tools Required: Torx T20 Screwdriver

CAUTION! Before installing duct kit, disconnect dehumidifier from electrical power and disconnect duct work if previously installed.


Step 1: Remove six screws (three on each side) from the Advance2 dehumidifier.

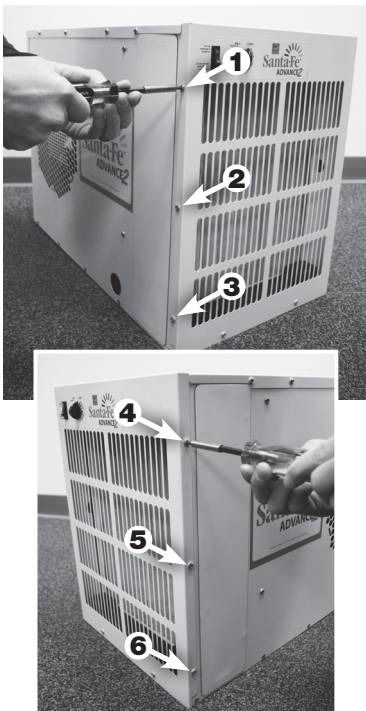

Step 2: Place duct kit assembly on dehumidifier and line up holes on assembly with screw holes.



Step 3: Using six screws previously removed, replace screws into holes to secure duct kit assembly.

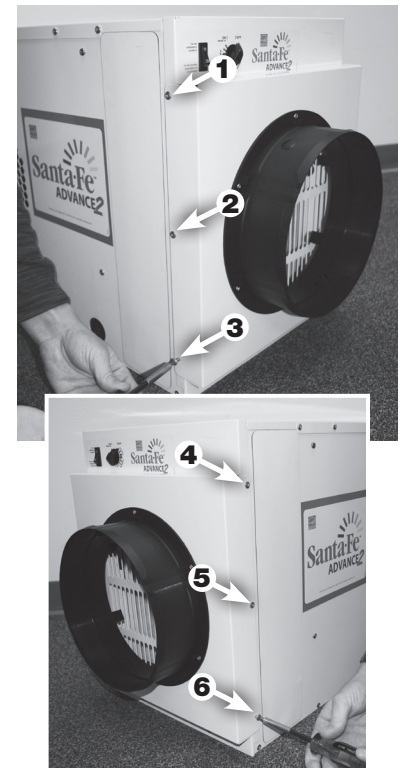

Therma-Stor[®] LLC

Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com
TS-887 Rev 12/22/14