

# Installation Instructions


## Bird Spike 2001® Stainless Steel Bird Spike

Bird B Gone® patented Stainless Steel Bird Spike Bird Spike 2001® is the most effective, permanent protection to deter birds from landing and roosting. Bird Spike 2001® is made of high-quality stainless steel that will not rust or deteriorate under extreme conditions. The U.V. protected polycarbonate bird spike base is flexible, can bend 360°, and will fit flat and curved surfaces. Bird Spike 2001® has an industry leading guarantee of 10-years and is available in 1", 3", 5", and 8" widths.

**BIRD SPIKES ARE NOT RECOMMENDED IN AREAS WHERE BIRDS ARE NESTING.**


### APPLICATIONS

Bird Spike 2001® is a versatile system that can be easily glued, screwed, or tied down to various surfaces.

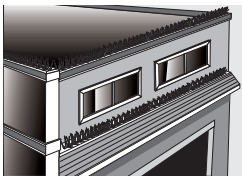


#### Ledges:

Bird Spike 2001® prevents pest birds from congregating on ledges, sills, roof tops, etc. Installing Bird Spike 2001® will stop birds from landing, roosting, and creating unsightly messes and health problems.

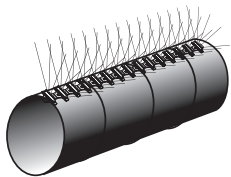


#### Conduit:

Bird Spike 2001® can be attached to wires, conduit, gutters, and pipes by using common hose clamps, nylon ties, wire, or glue.

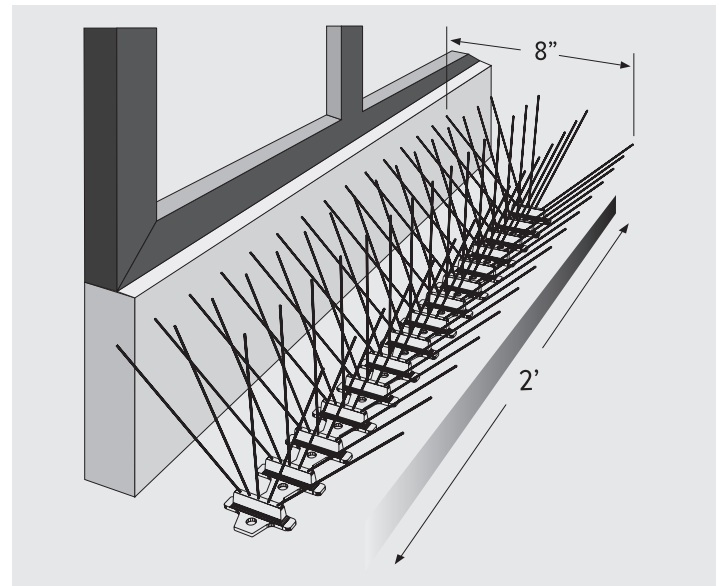


Bird Species	Pigeons, seagulls or larger birds
Bird Pressure	Light to Medium
Where to Use	Ledges, I-beams, parapet walls, conduits, signs, flat or curved surfaces
Warranty	10-year manufacturer's warranty
Commercial Packaging	50 ft. per box (25 – 2 ft. sections/box) Each box measures 26" x 19" x 7"

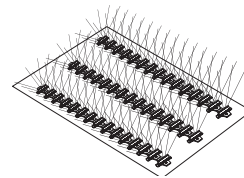

#### Large Flat Surface:

Bird Spike 2001® can be installed in multiple rows for a wider area of coverage.

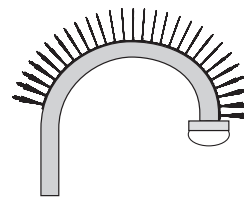

#### Curved Surfaces:

Bird Spike 2001® is so flexible that it can bend 360° without breaking. Install Bird Spike 2001® on all curved surfaces such as lampposts, signs, letters, etc. by using adhesive with nylon ties, hose clamps, etc.

**Have installation questions?**

Call Bird•B•Gone® at 949.472.3122 or 800.392.6915



**Scan this QR code to watch installation instruction video.**



800.392.6915 | [www.birdbgone.com](http://www.birdbgone.com) |  made in the USA

# Installation Instructions

## Bird Spike 2001<sup>®</sup> Stainless Steel Bird Spike

**CAUTION: READ AND FOLLOW ALL INSTRUCTIONS PRIOR TO INSTALLATION. SPIKES ARE SHARP. WEAR GLOVES AND SAFETY EYE WEAR. KEEP OUT OF REACH OF CHILDREN AND PETS. DO NOT INSTALL WHERE HUMAN PHYSICAL CONTACT IS POSSIBLE.**

### 1. DISINFECT AND CLEAN ALL SURFACE AREAS

Thoroughly clean all surfaces prior to Bird Spike 2001<sup>®</sup> installation. Suggestion: Use Microcide SQ™ or a 10% bleach or ammonia solution to disinfect the area. It is extremely important that all debris including overhanging branches, leaves, nests, etc. is removed prior to disinfection. Allow area to dry before installation.


**DUE TO INFECTIOUS DISEASES ASSOCIATED WITH BIRD FECES, USE EXTREME CARE WHEN REMOVING NESTS AND BIRD DROPPINGS.**

### 2. DETERMINE THE METHOD OF ATTACHMENT

**For Concrete, Brick, Steel:** Adhere bird spike strips using non-silicone outdoor construction-grade adhesive. Run a bead of adhesive down the underside of each bird spike strip. Press bird spike strip into place allowing the adhesive to mushroom-up for more effective adhesion. Bird•B•Gone<sup>®</sup> recommends the use of SikaFlex and Eclectic E6100 brand adhesives for best adhesion. One caulking tube of adhesive will adhere approximately 25 ft. of Bird Spike 2001<sup>®</sup>.

1/4" Glue trough/holes for easy adhesive attachment

1/4" Screw holes for screw/bolt attachment

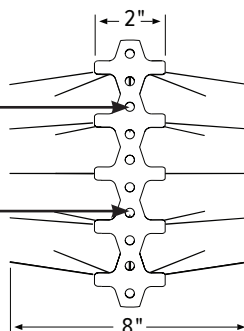



**For Wood:** Use wood screws to secure bird spike strips to wood surfaces. Using pre-drilled holes along the base, screw into the end of each bird spike strip tightly and place one wood screw at least every six inches along the base.

**Tie Down:** For pipes and other areas, secure bird spike strips with nylon ties by wrapping and securing the tie around the base of the bird spike strip.


**NOTE: WHENEVER POSSIBLE, BIRD SPIKE STRIPS SHOULD BE SCREWED OR BOLTED DOWN IN CONJUNCTION WITH THE USE A NON-SILICONE OUTDOOR CONSTRUCTION-GRADE ADHESIVE.**

### 3. SPIKE PLACEMENT

- To prevent birds from nesting behind the spike, leave no more than 1" gap between the wall and the bird spike strip.
- To prevent birds from sitting on the ledge, leave a minimum of 1/2" overhang between the tip of the bird spike and front/leading edge.

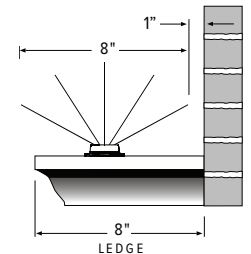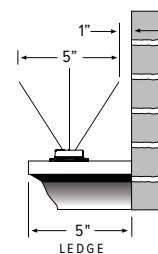

- For wide areas, multiple rows of bird spike strips may need to be installed. Install bird spike strips with 1" overlap.

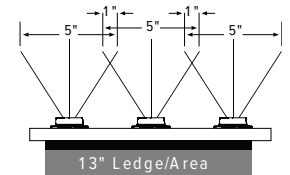

### 4. ADAPTING TO SIZE

- Bird Spike 2001<sup>®</sup> can be easily cut to desired size using tin snips, wire cutters, or snapped apart by hand along the narrow section of the bird spike strip base.

**Have installation questions?**

**Call Bird•B•Gone<sup>®</sup> at 949.472.3122 or 800.392.6915**



800.392.6915 | [www.birdbgone.com](http://www.birdbgone.com) |  made in the USA