

STORGARD[®] DOME[™] CB

Insect Monitoring Kit Assembly Instructions

For: Cigarette Beetle (CB), *Lasioderma serricorne*





TRAP ASSEMBLY INSTRUCTIONS

1. Remove components from carton. Each carton includes:
 - A. Trap/catch reservoirs (5)
 - B. Dome covers (5)
 - C. Pheromone lures (5)
 - D. CB kairomone lures (5)
 - E. Absorbent pads (10)
 - F. Oil-based food (kairomone) attractant container (1)
2. Remove one pheromone lure and one kairomone lure from foil packages
 - A. Remove cover from the adhesive pad in the center of the 3 pins located on the dome cover. Press the CB kairomone lure firmly onto the adhesive pad.
 - B. Insert the small end of the CB pheromone lure onto one of the pins located on the dome cover. The pheromone lure should be firmly inserted with large end pointing down over the catch reservoir.

Note: The kairomone and pheromone attractants will work together to enhance capture rate.
3. Place an absorbent pad in the bottom of the catch reservoir. (Five additional pads are included for use when renewing the oil-based kairomone.) Saturate (avoid excess) the pad with oil from the oil-filled container. It is important to add a few drops 1-2 times per week to maintain trap efficiency. The kit contains enough oil to recharge each trap four times.

Note: Do not spill kairomone-based oil on sides of catch reservoir. Wipe off any oil before continuing. Do not discard used oil contains within storage facility.
4. Align projections on dome cover with indents on base and snap the two parts together. When handling trap, grasp the indents in the cover lightly with your fingers. Trap is now ready for placement.

Warning: Do not dispose of lure foil wrapping or used lures within the storage facility.

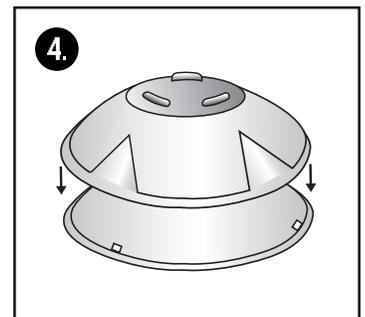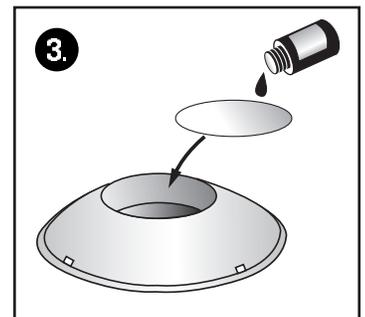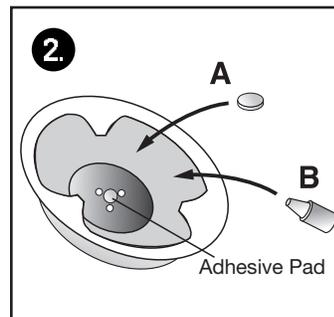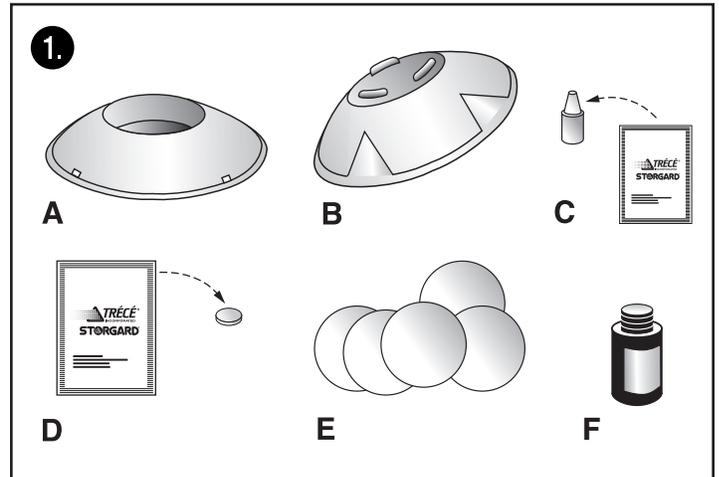

Please see Trécé's IPM Partner[®] Guidelines for further instructions.

OUR EDGE & YOURS, IS KNOWLEDGE

TRÉCÉ, INC. P.O. BOX 129 ADAIR, OK 74330 918-785-3061 FAX: 918-785-3063

TRÉCÉ[®], Pherocon[®], STORGARD[®] and CIDETRAK are registered Trademarks of TRÉCÉ Inc., Adair, OK USA
© 2007 TRÉCÉ, Adair, OK USA. Dome[™] U.S. Patent No. 5,090,153


TRÉCÉ[®]
INCORPORATED

INSECT MONITORING SYSTEMS & PHEROMONES

www.trecede.com